



NTG Motor Services Limited

282 - 284 Bramford Road Ipswich Suffolk IP1 4AY

Tel: ++44 (0)1473 - 406031 & 406032

Fax: ++44 (0)1473 - 742087 Email: sales@mgbits.com

www.mgbits.com

www.bmcfarina.com

Directors: M.Green P.Banyard

Company Reg.No. 1262476

V.A.T.Reg. No. 289 5422 17

FUEL GAUGES (PREFIX FG) & TANK UNITS (PREFIX FT, FTS & TM)

The automobile fuel gauge consists of two parts – the fuel gauge mounted in the dashboard and the tank unit in the fuel tank. These units are connected by a lead which is often vulnerable to corrosive or abrasive action.

The fuel gauge indicates the level of fuel in the tank in accordance with the position of the tank unit float. There is a limited reserve of fuel left when the gauge shows "Empty". **Before in-**

vestigation of the equipment always disconnect the battery. Never connect the battery direct to 'T' terminals, as this will burn out the gauge, or across 'B' & 'T'.

Fuel gauges with the FG prefix have a moving iron movement and are visually identified by the fact that the pointer moves immediately the ignition is switched on.

A: Connections must be in accordance with diagram below.

B: Earth connections as indicated are essential.

C: You must use the correct tank unit which is compatible with the gauge.

D: We do not accept responsibility for gauges burnt out while fitting. Please take care!

